CPUファンエラーが表示される(回避方法)

①スイッチを入れて画面がでたらDeleteキーを押してください。 「Exit/Advanced Mode」をクリック



②「Advanced Mode」をクリック



③「Monitor」の項目の「CPU Fan Speed Low Limit」のところでEnterキーを押します

I ■ Main	Ai Tweaker,	Advanced	Monitor
CPU Temperature			+39°C / +102°F
18 Temperature			+31°C / +87°F
PU Fan Speed			1864 RPM
PU OPT Speed			N/A
hassis Fan 1 Speed			N/A
hassis Fan 2 Speed			N/A
hassis Fan 3 Speed			N/A
hassis Fan 4 Speed			N/A
PU Q-Fan Control			Enabled
			600 RPM

④「Ignore」を選択

ULE UEFT BIC				
Hain	Ai Tweaker,	Advanced	Monitor	
CPU Temperature			+38°C / +100°F	
MB Temperature			+31°C / +87°F	
CPU Fan Speed			1834 RPM	
CPU OPT Speed			N/A	
Chassis Fan 1 Speed		CPU Fan Sp	eed Low Limit	
Chassis Fan 2 Speed		Isnore		î.
Chassis Fan 3 Speed		200 RPM	NZA	
Chassis Fan 4 Speed		400 RPM		
CPU Q-Fan Control		600 RPM		
			Enabled	
CPU Fan Profile			600 RPM	-
	otrol		Standard	

⑤F10キーを押して「YES」を選択して終了です。

Hain Al Tweaker,	Advanced Monitor		
CPU Temperature	+39°C / +102°F		
MB Temperature	+32°C / +89°F		
CPU Fan Speed	1867 RPM		
CPU OPT Speed	N/A		
Chassis Fan 1 Speed	Save Changes & Reset		
Chassis Fan 2 Speed	Save configuration and reset?		
Chassis Fan 3 Speed	Ves No N/A		
Chassis Fan 4 Speed	NZA		
CPU Q-Fan Control	Enabled		
	Tenore		
	Standard		
Chassis 1 Q-Fan Control	standard		